


MICRO ACTIVE BRAKE II

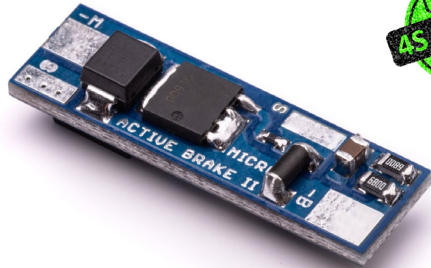

Limitation: spring M160 (current 25A)

This device has to install expert.
He must know how to disassemble airsoft gun and solder.
Never use soldering gun!



www.jefftron.net

How connect device into the gun

- 1) Red wire with max. 1,5 qmm lead to the battery positive (+B)
Add fuse on this wire close to the battery (not included in package)
- 2) Black wire with max. 1,5 qmm lead to the battery negative (-B)
- 3) Red wire with max. 1,5 qmm lead to the motor positive (+M)
- 4) Black wire with max. 1,5 qmm lead to the motor negative (-M)
- 5) Blue wire with max. 0,5 qmm lead to the 1st trigger contact (S)
- 6) Blue wire with max. 0,5 qmm lead to the 2nd trigger contact (S)

Be sure to connect wires appropriately, otherwise you could destroy the device, gun or battery. Test the functionality of device, drag heat shrink tube (in package) over the device and shrink it by hot air gun.

