

# MOSFET - V2

## WITH WIRING

UP TO  
4S / 14.8V  
LIPOL



**Max. spring M160 (current 25A)**

This device has to install expert. He must know how to disassemble airsoft gun and solder. Never use soldering gun!

[www.jefftron.net](http://www.jefftron.net)



## How connect device into the gun

- 1) Red wire lead to the battery positive and to the motor positive. Add fuse on this wire close to the battery.
- 2) Long black wire lead to the battery negative (mark **-B** on board).
- 3) Short black wire lead to the motor negative (mark **-M** on board).
- 4) Blue wire lead anywhere on the red wire. Lead him inside the gear-box together with other wires or outside around gearbox on the left (if inside isn't enough place for this wire).

Be extra sure to connect the red and black wires appropriately, otherwise you should destroy the device, weapon or battery. Also check right function trigger and cut-off lever with plunger.

