


AR MOSFET

BATTERY IN THE STOCK IN THE GEARBOX V2

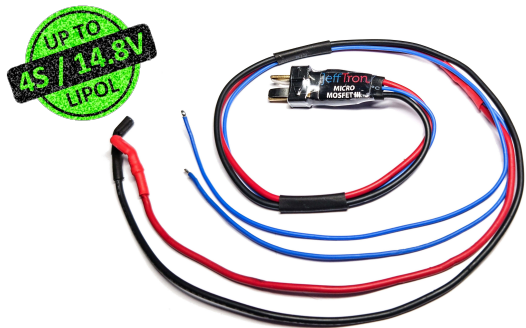

Limitation: spring M170 (current 35A)

It has to be installed by expert.
He must know how to disassemble the replica and solder.
Never use a soldering gun!

www.jefftron.net



Device wiring procedure

- 1) Connector on the black wire connects to the motor negative. The connector on the motor is at the rear of the grip.
 - 2) Connector on the red wire connects to the motor positive. The connector on the motor is in the front of the grip.
 - 3) Two blue wires lead inside the gearbox together to trigger contacts and solder each wire separately to the trigger contact plates.
- Be sure to connect the red and black wires appropriately, otherwise you should destroy the device, gearbox part or battery.

